



## Full colour signs & labels in seconds



**BradyJet J5000**  
COLOR LABEL PRINTER

# Full colour, maximum impact signs & labels

The BradyJet J5000 Colour Label Printer enables you to create full colour indoor signs and labels on demand. These will help you to offer important safety and lean information right where employees need to see it.

Easily create the full colour labels and signs needed with the BradyJet J5000 Colour Label Printer to communicate **safety information, procedures, facility identification** and a variety of other applications **to reduce workplace accidents and to increase productivity.**



## REDUCE ACCIDENTS

Make your workplace safer by looking for potential hazards to warn for them on the spot with a safety sign. With custom, on-demand and compliant signs you can prevent costly accidents before they occur. Most importantly, when you have the right signs, pipe markers and other safety messages in the right places, you can **send employees home safely every day.**

Use the BradyJet J5000 Colour Label Printer to immediately communicate about an identified hazard by creating safety signs, CLP/GHS labels, Lockout/Tagout tags, arc flash labels, fire visuals or machine hazard labels.



## INCREASE PRODUCTIVITY

Use the BradyJet J5000 Colour Label Printer to print standard work procedures and waste management rules. Create machine operating procedures and attach them to machinery to **increase efficiency on the workflow.**

Identify passage ways, danger zones, departments and storage areas with clear colour coded signs so new employees and contractors don't lose time finding their way. Add PPE communication, steps to take in the event of a fire and evacuation plans.



# Application versatility

Choose from 55.00 to 203.20 mm sized vinyl or polyester materials and start printing the signs and labels you need for your facility. Look at the examples to get an idea of what you can achieve when supported by the BradyJet J5000 Colour Label Printer.



Safety Signage



CLP/GHS



Pipe Marking



Evacuation maps



Lean/5S



Facility signage

# Printer, accessories & labels

## Printer

Order Ref.	Art. No.	Description
J5000-EU	148792	BradyJet J5000 Colour Label Printer - EU
J5000-UK	148791	BradyJet J5000 Colour Label Printer - UK
J5000-US	148704	BradyJet J5000 Colour Label Printer - US



## Accessories

Order Ref.	Art. No.	Description
J50-CUTTER	148768	J5000 Replacement Cutter Blade
J50-PAD	148769	J5000 Replacement Ink Pads
J50-PH	148770	J5000 Replacement Printhead

## Ink Cartridges



Order Ref.	Art. No.	Colour	Description
J50-CMYK	148765	Cyan, Magenta, Yellow, Black	Multi-pack pigment based ink cartridge for J5000 Printer
J50-CY	148763	Cyan	Cyan pigment based ink cartridge for J5000 Printer
J50-MA	148762	Magenta	Magenta pigment based ink cartridge for J5000 Printer
J50-YL	148764	Yellow	Yellow pigment based ink cartridge for J5000 Printer
J50-BK	148766	Black	Black pigment based ink cartridge for J5000 Printer

# Printer specifications

Specifications	
Print Resolution	Up to 4800 dpi
Print Technology	Inkjet
Colour Capability	Multicolour, Monocolour
Continuous vs Die-cut Labels	Continuous Tape & Die Cut Labels
Max. Label Width	209.55 mm
Max. Print Width	203.2 mm
Max. Print Length	609.6 mm
Cutter	Auto Cutter - between labels or at end of print job
Print Speed	152.4 (mm/sec)
PC Connectivity	Yes
Software Compatibility	Brady Workstation, Windows based driver for 3rd party software use
Connectivity Options	USB, Wifi, Ethernet
Physical Properties	
Depth x Height x Width	521 mm x 259 mm x 495 mm
Weight	20.4 kg
Display	Colour LCD
Operating Temperature	15°C-32°C
Approval/Compliance	USA: UL, FCC ClassA - Canada: cUL, IC/ISED - European Union: CE Mark; 2014/35/EU LVD, 2014/30/EU - EMCD, 2011/65/EU, 2015/863/EU RoHS2, 2014/53/EU RED - Australia/New Zealand: RCM - Japan: MIC
Warranty	1 year

## Labels

Diagram	Order Ref.	Art. No.	Colour	Label Width A	Height/Length B	Labels per Roll
<b>Inkjet Receptive Polyester</b>						
∞	J50C-2250-2569	148665	White	57 mm	30 m	1
∞	J50C-4000-2569	148658	White	101 mm	30 m	1
∞	J50C-6000-2569	148652	White	152 mm	30 m	1
∞	J50C-8000-2569	148655	White	203 mm	30 m	1
▲	J50-260-2569	148662	White	55 mm	85 mm	340
▲	J50-261-2569	148661	White	75 mm	110 mm	270
▲	J50-262-2569	148654	White	105 mm	155 mm	200
▲	J50-267-2569	148668	White	155 mm	210 mm	120
▲	J50-265-2569	148667	White	178 mm	254 mm	100
<b>Inkjet Receptive Vinyl</b>						
∞	J50C-2250-2595	148656	White	57 mm	30 m	1
∞	J50C-4000-2595	148653	White	101 mm	30 m	1
∞	J50C-6000-2595	148666	White	152 mm	30 m	1
∞	J50C-8000-2595	148663	White	203 mm	30 m	1
▲	J50-260-2595	148657	White	55 mm	85 mm	340
▲	J50-261-2595	148660	White	75 mm	110 mm	270
▲	J50-262-2595	148651	White	105 mm	155 mm	200
▲	J50-267-2595	148664	White	155 mm	210 mm	120
▲	J50-265-2595	148659	White	178 mm	254 mm	100

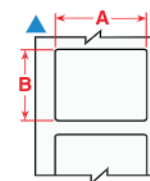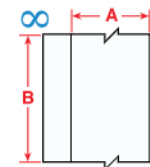


# Quickly print full colour durable signs & labels

The BradyJet J5000 Colour Label Printer quickly prints full colour safety and lean signs, logos and images in photo-quality on durable materials.

## FULL COLOUR

Full colour high resolution messages succeed best in attracting people's attention which is incredibly important to warn co-workers for potential dangers with safety signs and pipe markers, or for lean labels that help co-workers make efficient decisions on the work floor. The BradyJet J5000 Colour Label Printer is **an inkjet technology printer that can create signs and labels in any colour.**

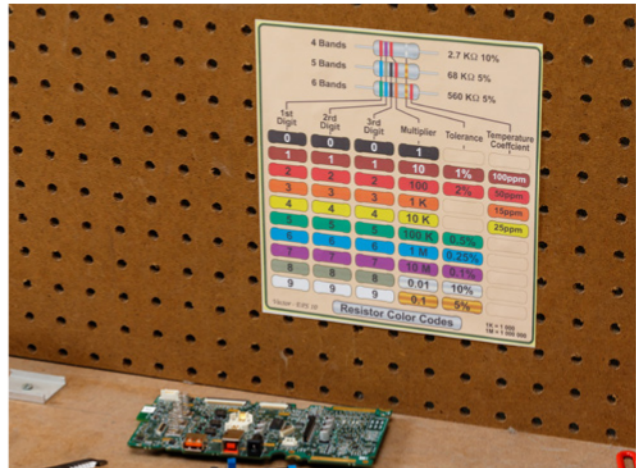

## FAST

Print full colour signs and labels in one pass at a top speed of 150 mm per second. That means a self adhesive 203.20 mm vinyl or polyester safety sign **can almost be printed instantly.** That makes the BradyJet J5000 Colour Label Printer a great peripheral tool for any company that needs to quickly add or renew indoor safety signs, lean labels or pipe markers in full colour and in high resolution.

## DURABLE

The BradyJet J5000 Colour Label Printer prints on Brady's durable B-2595 vinyl and B-2569 polyester sign and label material range. These labels feature a topcoat that **enhances the colour and label appearance, and protects your print from smudging and harsh conditions.** The labels have been tested to withstand exposure to liquids, alcohol and chemicals. Available in sizes ranging from 50.80 to 203.20 mm for the BradyJet J5000 Colour Label Printer, they are ideally suited to serve as **indoor safety signs, lean labels and pipe markers.**



# Easily design your signs & labels

Easily design the signs & labels you need with your selection of Brady Workstation apps.  
**Download the Brady Workstation app platform from [workstation.bradyd.com](http://workstation.bradyd.com)** and select from a wide range of free and paid sign & label creation apps.

## Available apps for use with the BradyJet J5000 Colour Label Printer:



- **Custom Designer App:** Design anything you can imagine in this free app. Start with a blank canvas to create a label or sign that meets your unique needs. Add barcodes or QR-codes, import data from Excel and more!



- **CLP/GHS Labels App:** Creating CLP/GHS labels is now amazingly simple. Enter your SDS data one time through a simple drop down list and text entry, and you can create any size CLP/GHS label and print it at any time.



- **More apps** will be released. Continue to check [workstation.bradyd.com](http://workstation.bradyd.com) for new apps!

## THE STEPS ARE SIMPLE



1. Download Brady Workstation at [workstation.bradyd.com](http://workstation.bradyd.com)



2. Fill the workstation with the apps you want



3. Save time by quickly designing and printing labels!

Visit [workstation.bradyd.com](http://workstation.bradyd.com) to download the app platform and choose from the Custom Designer app, GHS app or additional apps that are planned to be released for the **BradyJet**.

**BRADY** WHEN PERFORMANCE MATTERS MOST™

[WWW.BRADYEUROPE.COM](http://WWW.BRADYEUROPE.COM)

### Brady EMEA Locations

Africa	+27 11 704 3295	Middle East	+971 4881 2524
Benelux	+32 (0) 52 45 78 11	Norway	+47 70 13 40 00
Central & Eastern Europe	+421 2 3300 4800	Romania	+40 21 202 3032
Denmark	+4566 14 44 00	Russia	+7 495 225 93 62
France	+33 (0) 3 20 76 94 48	Spain & Portugal	+34 900 902 993
Germany	+49 (0) 6103 7598 660	Sweden	+46 (0) 8 590 057 30
Hungary	+36 23 500 275	Turkey	+90 212 264 02 20
Italy	+39 02 26 00 00 22	UK & Ireland	+44 (0) 1295 228 288

Your Brady Distributor

01/09/2016  
EUR-M-841-EN

